




# THE BRASS WORKS INC

When replacing a lockset there will be critical dimensions and details that are required.

## IMPORTANT MEASUREMENTS FOR INSTALLING / REPLACING MORTISE LOCKS

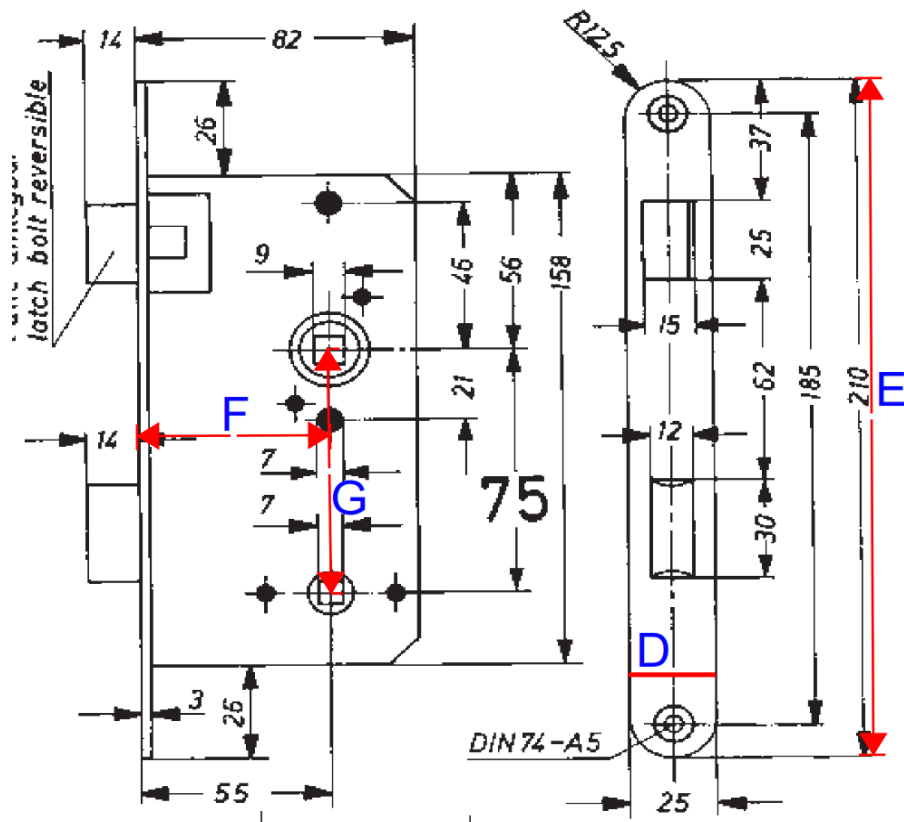


D - Faceplate Width:

E - Faceplate Length:


F - Backset: Distance from Front of Faceplate to Center of Handle / Keyhole.

G - Centers - Distance between the middle of the Lever Hub, down to the middle of the Z or WC Hub.

Hand of door for **mortise locks** is „left hand“ and „right hand“.

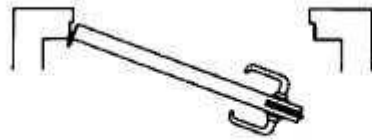


**left hand**

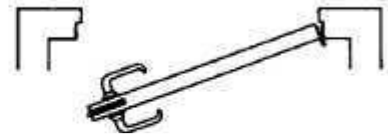

**right hand**

Hand of door for **rim locks** is identified in the same manner as for mortise locks except that in addition to "left hand" and „right hand“ it should be stated whether locks are used for inward or outward opening doors

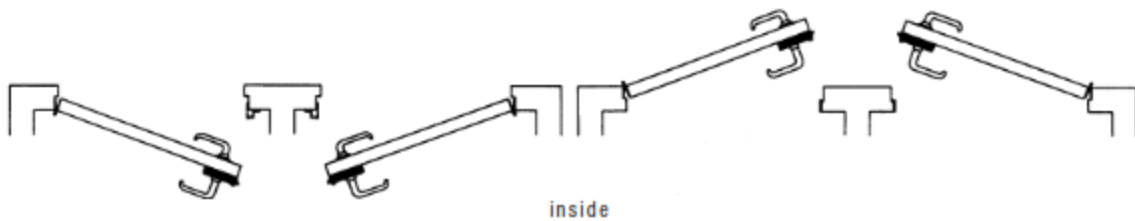

**left hand  
inward**

**right hand  
inward**

**right hand  
outward**

**left hand  
outward**